

Addendum

This addendum is applicable to the following document:

Series PM172 Powermeters, Installation and Operation Manual, BG0270 Rev. C.

Subject: PM172 Firmware Versions 4.88.3 or later

1. Pages 5-6, Measured Parameters:

Parameter	Display	Comm.	Analog	Pulse	Alarm
Average Values					
...					
Voltage & Current unbalance	✓	✓			
...					
Phase rotation	✓	✓			#\$
Phase angles	✓	✓			
...					

2. Page 48, Table 5-1 Displayed Parameters:

Page	Window	Arrow LED	Parameter ¹	Digits	Unit ²
Common Measurements					
			...		
5	1	A NEUT	Neutral current	4	A
5	2	Hz	Frequency	4	Hz
5	3	kvar	Total kvar	4	kvar/Mvar
6	1		U.Unb		Label
6	3		Voltage unbalance	4	%
7	1		C.Unb		Label
7	3		Current unbalance	4	%
8	1		Ph.L1⁵		Label
8	2	PF	Power factor L1	4	
8	3	kW	kW L1	4	kW/MW
			...		

3. Page 54, Table 6-1 Status Information:

Page	Window	Parameter	Digits	Unit
1	1	PHAS.		Label
1	2	rOt.		Label
1	3	Phase rotation (POS/NEG/ERR)	4	
2	1	V1 angle (reference)	4	0.1 Degree
2	2	V2 angle	4	0.1 Degree
2	3	V3 angle	4	0.1 Degree
3	1	I1 angle (reference)	4	0.1 Degree
3	2	I2 angle	4	0.1 Degree
3	3	I3 angle	4	0.1 Degree
4	1	rEL.		Label
4	2	1.2.		Label
4	3	Relay status #1-#2	2	
		...		